



C Prox Ltd (Inc Quantek)

11 Callywhite Business Park, Callywhite Lane, Dronfield S18 2XP
+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

M8/ML8 RS3 KIT – Remote control operating instructions

Configuration 1

Top button is programmed to C1

Bottom button is programmed to C2



Primary control button

Use this button to open, stop & close the door.

If you press the button while the door is opening, the door will stop. If you press the button again, the door will continue opening (See notes below). When the door has fully opened, press the button again to close it.

If you press the button while the door is closing, the door will stop and reopen.

Deadman close button

Use this button to close the door in deadman (hold to run).

Important! You must be always looking at the door.

This function is useful if the door is part way open and you want to close it, or for closing the door if there is any an issue with the safety devices.

Notes

The safety system requires the door to close from the top limit. If the door is stopped halfway and you press the primary control button, the door will open fully.

Alternatively, use the deadman close button to close the door.

Always check the door has fully closed before walking or driving away.

3 faint red flashes when pressing the remote indicates the battery needs changing.

Configuration 2

Top button is programmed to C3

Bottom button is programmed to C4



Open button

Use this button to open the door.

Close button

Use this button to close the door.

If you press the button while the door is opening, the door will stop.

If you press the button while the door is stopped, it will open before closing automatically. (See notes below).

If the button is unresponsive, there is likely an issue with the safety devices. To close the door, press and hold the button, after 5 seconds the door will begin to close in deadman. Keep the button pressed until the door is shut.

Important! You must be always looking at the door.

Notes

The safety system requires the door to close from the top limit. If the door is stopped halfway and you press the close button, the door will open first and then close automatically.

Always check the door has fully closed before walking or driving away.

3 faint red flashes when pressing the remote indicates the battery needs changing.