



C Prox Ltd (inc Quantek)

Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

FOB4-M/FOB4-M-S Programming Instructions

1. Locate the receiver, it is a small black box.
2. Remove the cover of the receiver.
3. Press and release the PROG/LEARN button on the board, an LED will light up next to it.
4. Within 3 seconds (whilst the LED is still lit) press a button on the new transmitter.
5. The LED on the receiver will flash 3 times to confirm programming.
6. Repeat for the other buttons and additional transmitters if required.

Button A & C program onto channel 1, button B & D program onto channel 2.

Holding down the program button for more than 10 seconds will clear the memory.