



## GO PRO PROGRAMMING INSTRUCTIONS

1. Locate the receiver next to the gate/garage. It will be a small, light grey box with a moulded antenna at the top (see picture)
2. Using a screwdriver remove the cover of the receiver.
3. Press down the programming button on the board for 2 seconds and release it to enter programming mode. The receiver will emit a beep.
4. Now press the button on the new transmitter that you wish to program, the receiver will emit another beep to confirm.
5. Repeat this for any additional transmitters if required.
6. If it is a 2 channel receiver then the relays are activated: 1st relay by channel 1 (button 1) and the 2nd relay by channel 2 (button2).
7. After 10 seconds the receiver will come out of programming mode, signified by 2 beeps.



### C Prox Ltd - Inc. Quantek

Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

☎ 01246 417113 ✉ sales@cproxltd.com @ www.quantek.co.uk