



C Prox Ltd (inc Quantek)


 
Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

RX-T Manual

Specification:

- 12-24V AC or DC
- 2 relays, normally open, max 1A
- 200 code memory
- Compatible with C Prox transmitters and touch sensors
- Dimensions: 89 x 56 x 21mm

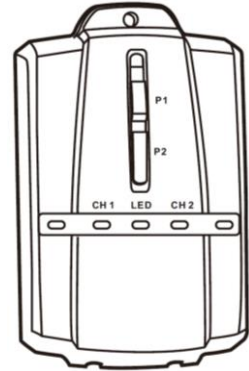

Programming a transmitter: NB: any button or touch sensor can be programmed to either channel

1. Make sure all outputs are deactivated. (No channel LEDs on)
2. If you wish to program channel 1, press and hold button **P1** for 2 seconds then release, the **CH1** LED will turn on.
If you wish to program channel 2, press and hold button **P2** for 2 seconds then release, the **CH2** LED will turn on.
3. Activate the transmitter you want to program **immediately**. The corresponding LED will flash quickly 2 times.

Both outputs will initially be set to Momentary Mode.

To change functionality to Latching:

Operate the transmitter, the corresponding output will turn on. **Immediately** press and release the corresponding button **P1** or **P2**. The channel LED will flash twice. Output is now changed to "Latching" mode. (On/Off)

To change functionality to Timer:

Operate the transmitter, the corresponding output will turn on. **Immediately** press and hold the corresponding button **P1** or **P2**. When the channel LED flashes, release button, each subsequent flash is 2 seconds. Press **P1** or **P2** button when desired time is reached.

To modify - activate transmitter and press & release appropriate P1 or P2 button.

The LED will flash twice. Output is now reset to Momentary Mode.

Delete transmitter:

1. Press and hold buttons **P1** and **P2** simultaneously.
2. Whilst they are still pressed, operate the transmitter you wish to erase.
3. The **CH1** and **CH2** LEDs will flash twice to confirm deletion of transmitter.

Total reset:

1. Press and hold button **P1** for 10 seconds. The **CH1** and **CH2** LEDs will turn on.
Release the button, the LEDs will turn off and all codes will be erased.