



# C Prox Ltd (inc Quantek)

Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

## KD433 Programming Instructions

Before you can use your transmitter, you must first set the security code so that it matches your existing transmitters. To do this you will need to have one of your existing transmitters available.

1. Remove the screw located at the bottom of your existing transmitter and lift off the TOP half of the transmitter case, put the transmitter to one side, now remove the screw and case from the new transmitter.
2. Locate the row of 8 switches on your new transmitter and using the tip of a ball point pen adjust their position so they match your existing transmitter. Note that each individual switch can be set to one of three positions TOP (+), MIDDLE (0), or BOTTOM (-).
3. Check that you have set the switches correctly and replace the transmitter case and screw. Your transmitter is now ready to use.

