

quick guide INSTALLER KEEpad



- MOTION keyboard, 3 channels 868 MHz ·
- IP65 · 3 batteries AAA 1,5V ·
- Autonomy: 2 years/6000 activations ·


EN

Radio keypad with visual interaction
and INSTALL&GO start-up

Description

3-channel motion transmitter; 3 different functions (open door, switch on courtesy light, ...).
Each of these channels is activated with a different password.


Installation

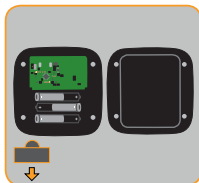


Remove plastic from
batteries




Save master code label in
a safe place

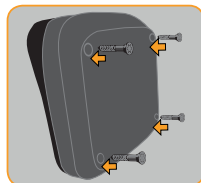

Screw back cover

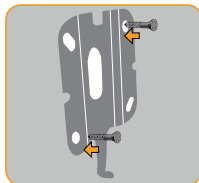

Fix support

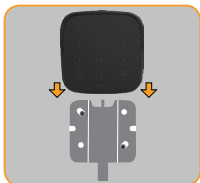

Slide on wall support



Fix device (use provided
tool)

Do not install near transmitting equipment of radiofrequency (it could decrease the battery life time).



Programming

PROG



Enter programming mode in receiver



Wake up



Enter the channel password to be programmed + OK

The default passwords are: 1111 for channel 1, 2222 for channel 2 and 3333 for channel 3.



Reset



Enter configuration mode



Select reset (⊙)



Enter master code (see yellow label) + OK

After a correct master code (⊙ + 1234), the default passwords are restored and, for safety, the keypad is reset from the receiver (it must be reprogrammed).



Paste here the master code label


KEEP THIS STICKER
IN A SAFE PLACE

1234

Problem solving

See our website for troubleshooting: <https://www.jcm-tech.com/JCM/keepad-keepush>

EC Declarations of Conformity

The manufacturer JCM TECHNOLOGIES declares that the product KEEPAD complies with the relevant fundamental requirements of the RED Directive 2014/53/EU and of the RoHS Directive 2011/65/EU.

JCM TECHNOLOGIES, SA · BISBE MORGADES, 46 BAIXOS · 08500 VIC (BARCELONA) SPAIN

See web page www.jcm-tech.com/declarations/

QG_3200791_KEEpad_EN_Rev04

jcmtechnologies

