



C Prox Ltd (inc Quantek)

Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

KEY-RC Programming Instructions

Please note this transmitter is a compatible replacement for the type with green & black buttons. Before using your new transmitter, it must be programmed into the receiver's memory.

1. Using an active (working) transmitter, press both buttons simultaneously for approximately 5 seconds, the receiver (the box that controls the garage or roller door) will beep indicating it is ready to learn new transmitter codes. Release both buttons.
2. Press the STOP button on the new transmitter, the receiver beeps confirming it has learn the new transmitter.
3. Wait approximately 10 seconds, the receiver will beep twice to indicate it has exited programming mode. The new transmitter can now be used.

