



## C Prox Ltd (inc Quantek)

Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

### NEO Transmitter Programming Instructions



1. Position yourself about 2 - 4 metres away from the receiver, with the already operating transmitter (**A**) and the new one you wish to programme (**B**).
2. Press the button on the back of transmitter (**A**) with the tip of a ballpoint pen. The receiver will emit a long beep.
3. Within 10 seconds, press the button of transmitter (**B**) selected for the function which you are programming (i.e. the button you want to operate the receiver). The receiver will emit a short beep to confirm programming.
4. After 10 seconds, the receiver will emit leave programming mode with 2 short beeps. Your new transmitter will now be operational.

If this method does not work, please refer to the receiver instructions.