



## C Prox Ltd (Inc Quantek)

11 Callywhite Business Park, Callywhite Lane, Dronfield S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

# CPWKP

## Wireless keypad



### Specification

- Number of channels: 4
- Frequency: 868MHz
- Transmission range: Up to 50 metres
- Power supply: 2 x 1.5V AA batteries (Included)
- Code length: 6 digits
- IP rating: IP54 (keep front cover clicked shut when not in use)
- Dimensions: 90h x 72w x 34d mm
- Compatibility: Quantek Receivers & Control Panels. RX-2, RX-2-5A, RX-4, RXMINI1, RXMINI1-PLUS, RX-T, GDRC, RC1000-MS, RC2000
- Dimensions : 91h x 72w x 33d (mm)

## Installation

1. Unscrew the bottom retaining screw and remove the back plate from the keypad.
2. Fix the back plate securely to the wall.
3. Fit the keypad back onto the back plate and fit the bottom retaining screw.
4. The clear cover must be clipped down when not in use.

Scan to view programming video



## Changing the master code

Please familiarise yourself with the process before attempting it, you have to a maximum of 5 seconds between steps.

Default master code: **999999**

1. Press B then enter master code.
2. Press 1 B.
3. Enter new master code (6 digits) followed by B.
4. Enter new master code again followed by B.

If anything is entered incorrectly it will beep and flash red 10 times. Please try again from the beginning.

**Write down the new master code and keep it safe. If you forget it, you will need to reset the keypad.**

## Changing the access codes

Please familiarise yourself with the process before attempting it, you have to a maximum of 5 seconds between steps. Do not use the same code as the master code.

1. Press B then enter master code.
2. Press channel number 1, 2, 3 or 4 followed by A. (The keypad can have up to 4 channels, and therefore 4 codes).
3. Enter new access code (6 digits) followed by B.
4. Enter new access code again followed by B.
5. Test the new access code.

If a code is entered correctly, it will flash green.

If a code is entered incorrectly, it will beep and the LED will be solid red. Please try again from the beginning.

## Programming access codes into the receiver or control panel

1. Press the program/learn button on the receiver for 1 second.
2. Within 15 seconds, enter the 6 digit access code.
3. The LED on the receiver will flash to confirm.
4. Repeat for any additional codes.

There is no need to reprogram the receiver if you change an access code.

On the RX-2, as default channels 1 & 3 program onto channel 1, channels 2 & 4 program onto channel 2.

If programming to an RC1000 or RC2000, channel 1 will open the door, channel 3 will close the door, they must be different codes. If the control panel is set to deadman, then the keypad can only be used to open the door.

The channels can be modified with a working remote control if required. Please see video below.



## Changing the batteries

The keypad will alert you when the batteries are low. When you press a button – 2 beeps=Low battery warning, 3 beeps=Very low battery warning, change immediately.

1. Undo the bottom retaining screw and remove the keypad from the back plate.
2. Undo the 4 Phillips screws in the back of the keypad and remove the back.
3. Swap the batteries for 2 new 1.5V AA.
4. Put the keypad back together, **ensure the 4 screws are tight to maintain water tightness.**

## Resetting the keypad

1. Undo the bottom retaining screw and remove the keypad from the back plate.
2. Undo the 4 Phillips screws in the back of the keypad and remove the back.
3. Remove one battery from the keypad.
4. Press and hold A as you reinsert the battery.
5. Keypad will beep twice.
6. Master code is now default 999999.

