



C Prox Ltd (Inc Quantek)

11 Callywhite Business Park, Callywhite Lane, Dronfield S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

GO/MUV PRO Transmitter Programming

There are two methods for programming new transmitters from transmitters that are already programmed and working. If method 1 doesn't work, please try method 2.

If neither work, please refer to the instructions of your receiver.


Note: On a communal gate for example, it is possible that the receiver could be securely managed by the installer or a management company, contact them directly if you believe this is the case as you will be unable to program the remotes.

Radio Programming (Method 1)

1. Take a working transmitter and your new transmitters to within a few metres of the receiver.
2. On the working transmitter, press both buttons simultaneously for 2 seconds (or the top 2 buttons if you have a 4 button remote).
3. This puts the receiver into programming mode, you should hear a beep from the receiver.
4. Within 10 seconds, press the top button on your new transmitter (you should hear a beep from the receiver).
5. If you have multiple new transmitters to program, press the top buttons of each one after another, no need to repeat steps 1-3 for each.
6. When finished, wait 10 seconds and you should hear 2 beeps from the receiver.
7. Test your new remotes.

[Video](#)

Side Programming (Method 2)

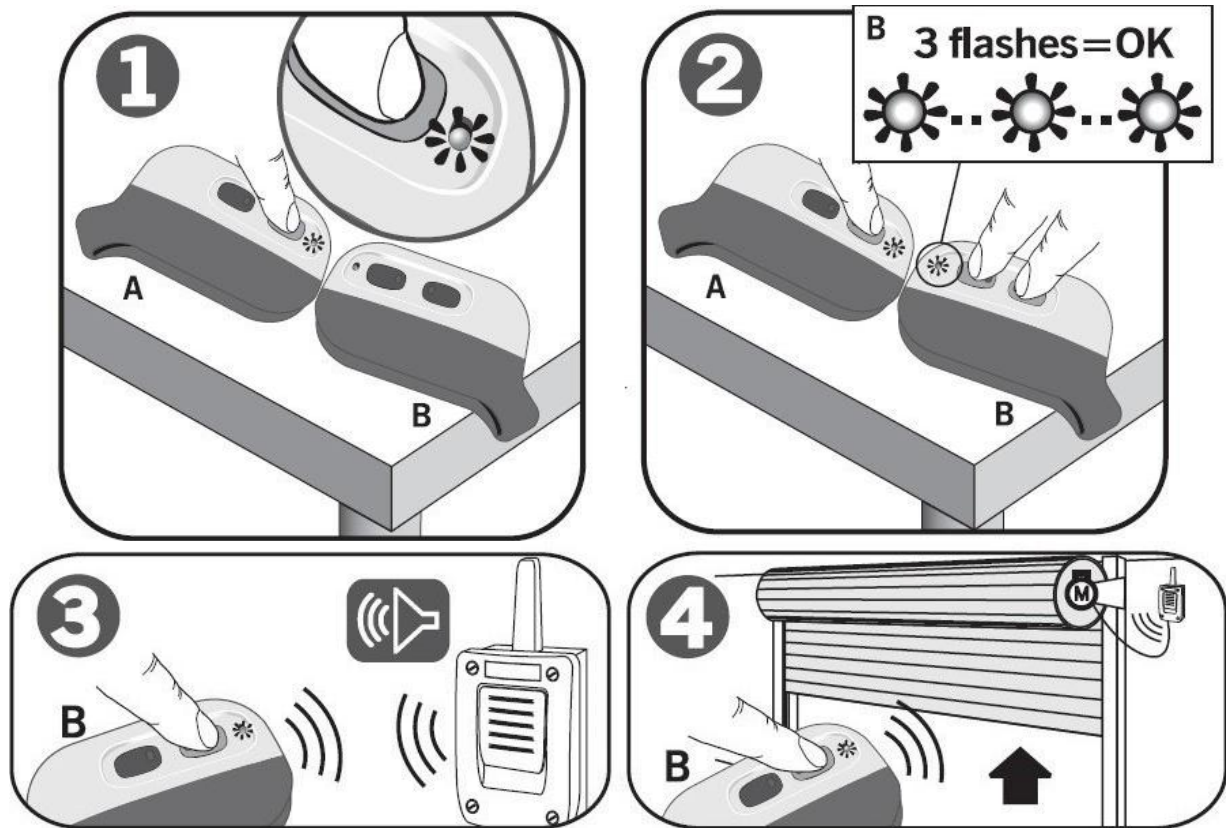

A = Existing Transmitter

B = New Transmitter to be programmed

Place both transmitters next to each other as shown on a non-metallic surface, a few metres away from the receiver.

1. Press button 1 on transmitter A and keep it pressed down.
2. Press down both buttons on transmitter B and keep them pressed until the LEDs flash 3 times.
3. Press button 1 on transmitter B, the receiver will beep.
4. Wait 10 seconds for the receiver to come out of programming mode; it will then be fully functional.

[Video](#)