




Mag Lock Installation Guide

And Choosing the Right Brackets

1. The mounting bracket is supplied with the maglock and is suitable for an **outward opening** door where there is ample space on the underside of the transom to fit the maglock.


An armature housing can be installed; this eliminates the need to drill through the door to install the bolt.

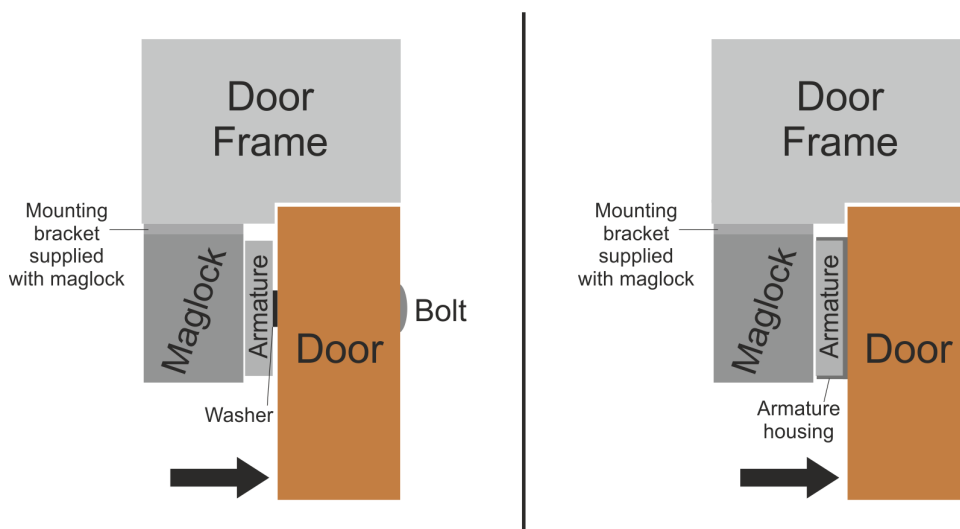

2. On **outward opening doors** where there is insufficient space on the underside of the transom, an L bracket is required.



An armature housing can be installed; this eliminates the need to drill through the door to install the bolt.

Architectural curved L brackets are available for an aesthetic finish.

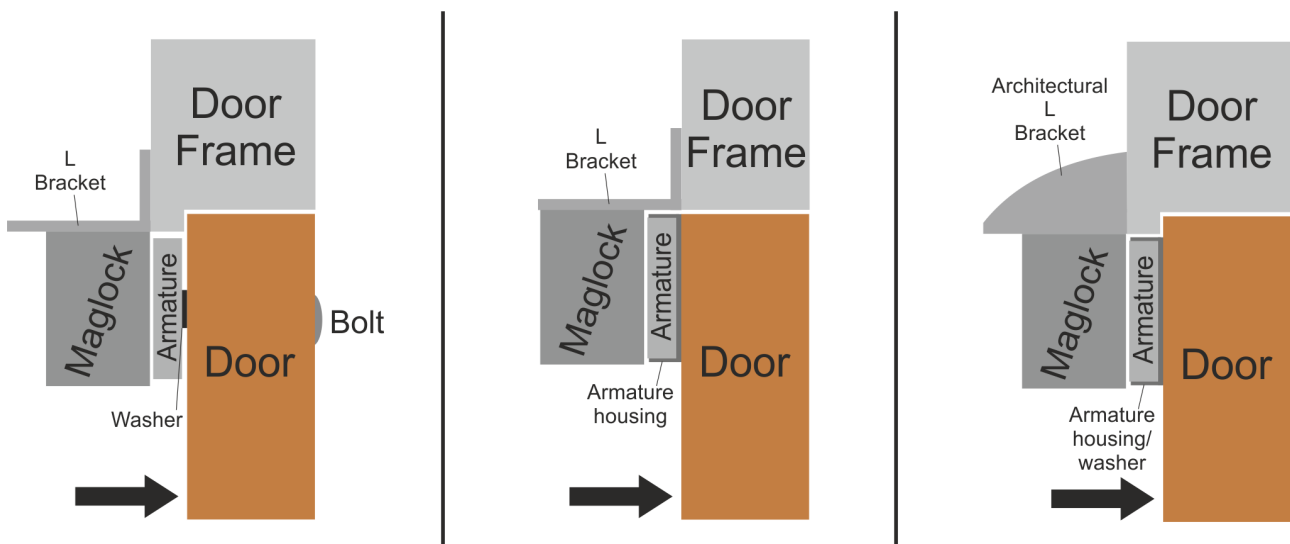


3. A Z&L bracket is required for inward opening doors.


Architectural curved Z&L brackets are available for a more aesthetic look.

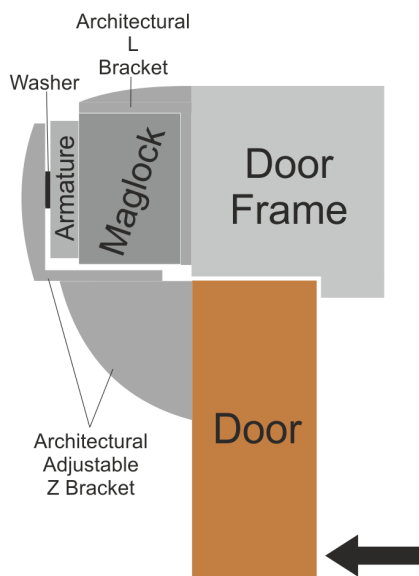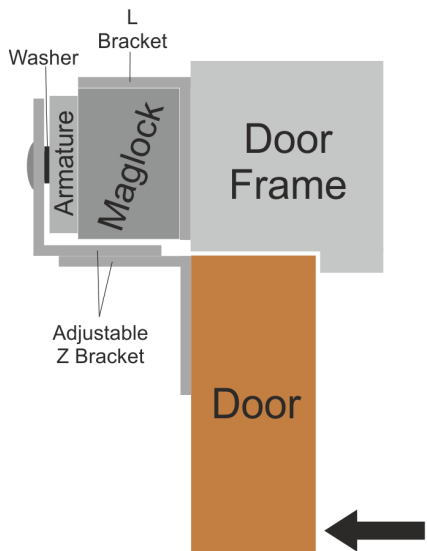


4. For outward opening glass doors with a glass frame, a glass mount L bracket (UBK300-L) & U bracket (CP28U) is required. The brackets clamp to the glass. This is only suitable for slimline/mini maglocks.

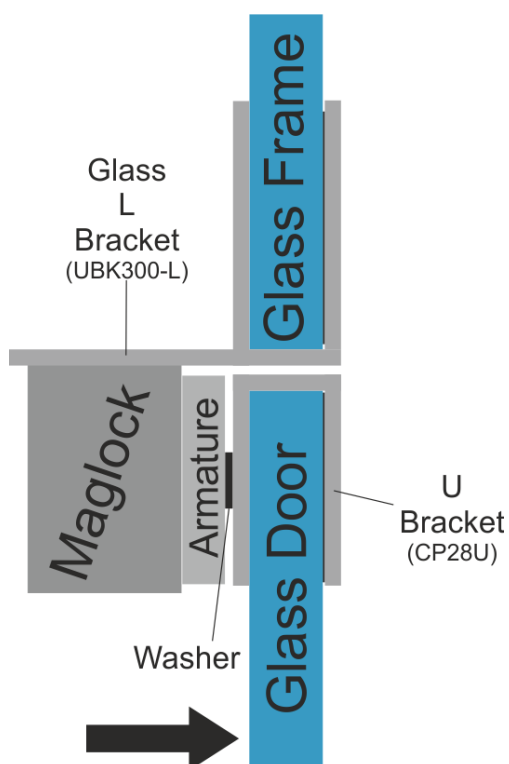

5. For inward opening glass doors with glass frame, a glass mount Z&L bracket is required (300ZL-G). The brackets clamp to the glass. This is only suitable for slimline/mini maglocks.

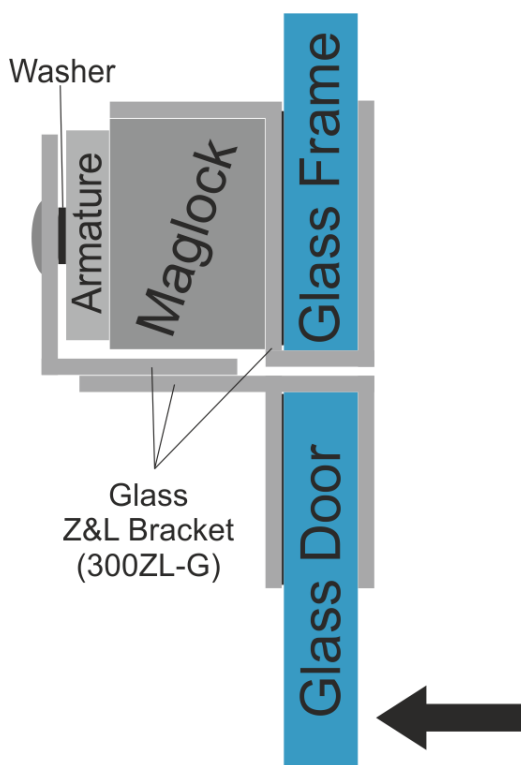

6. For **outward opening glass doors with standard frame**, a U bracket (CP28U) and L bracket (CP28L) is required. The CP28U bracket clamps to the glass. This is only suitable for slimline/mini maglocks.

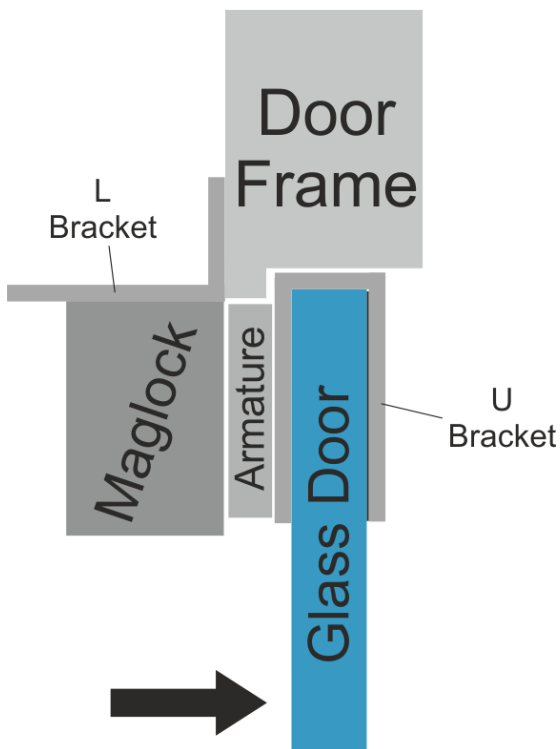

7. For **inward opening glass doors with standard frame**, a glass mount Z&L bracket (300ZL-G) and L bracket (CP28L) is required. The 300ZL-G bracket clamps to the glass. This is only suitable for slimline/mini maglocks.

