




C Prox Ltd (inc Quantek)

Unit 11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 8PQ

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk

ACCESS 500 Manual

- 1 Power supply
- 2 Channel 1 operation led
- 3 3 Event card connection
- 4 4 Antenna connection
- 5 Power supply lights
- 6 Programming pushbutton
- 7 Memory card connection
- 8 Expandable card connection
- 9 BUS-L (+, -, L)
- 10 Relay 1 output

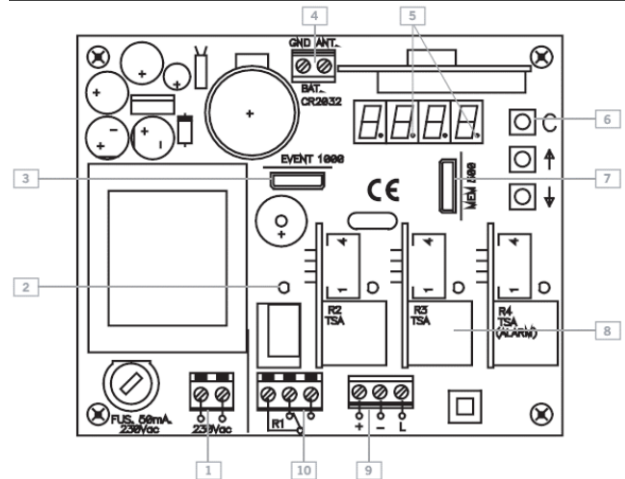

TECHNICAL CHARACTERISTICS

	ACCESS-500
Frequency	868,35MHz
Coding	High security rolling code
Memory	500 codes
Events	1000 event card (optional)
Number of relays	1 (expandable to 4)
Alarm function	Configurable on relay 4
Power supply	230Vac
Relay contacts	1A
Standby / op.	23mA / 42mA
Battery	CR 2032 3V DC
Access control output	BUS-L
Op. temperature	-20°C to +85°C
Watertightness	IP54 (with glands IP65)
Size	115x95x35mm
Box dimensions	140x220x55mm



INSTALLATION AND CONNECTIONS

Attach the rear part of the housing to the wall using the plugs and screws supplied. Pass the cables through the bottom of the receiver. Connect the power cables to the terminals marked in the mother board, as indicated. Fix the receiver front to the rear part using the screws supplied.

OPERATION

The lights on the screen blink to indicate correct power supply to the equipment.

On receiving a code the equipment checks if it is in the memory, activating the relay(s).

If the equipment code is not stored in the memory, the equipment will not perform any action, and the message "no" will be displayed on the screen.

MENUS

To access the menu, press any key and enter the password using the \uparrow \downarrow keys. \uparrow increases number, \downarrow changes digit, C confirms password. If the password is incorrect, the message "Err" is displayed on screen and the equipment emits a bleep.

The manufacturer set password is written on a sticker located on the memory card.

The menus that will be displayed are: Mod1 (basic mode), Mod2 (advanced mode), ---- (exit).

\uparrow \downarrow are used to change mode. To confirm each option, press the C key.

\uparrow	Menu scrolling key
\downarrow	Menu scrolling key
C	Menu accessing or option validating key

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and emits two short beeps.

Screen display	Description
Mod1	Basic mode: Allows programming in multi-channel mode and individual cancellations.
Mod2	Advanced mode: Allows complete management of the unit: programming (F.1), cancellations (F.2), time configuration (F.3) and relay configuration (F.4).

BASIC MODE (Mode1):

Allows programming in multi-channel mode and individual cancellations.

PROGRAMMING:

The screen displays 001, which indicates the first memory position. \uparrow \downarrow increase or decrease the memory position. Place in the desired position and press the channel of the transmitter to be programmed. If \uparrow \downarrow are kept pressed down for more than 3 seconds, the positions increase or decrease rapidly. If a memory position is taken, this will be indicated by a dot on the screen.

CANCELLATIONS:

To delete a code, move to the code position and press the C key. The dot indicating a taken position will disappear. The equipment will emit three short beeps.

To exit the menu, move to the ---- position and press the C key.

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and emits two short beeps.

ADVANCED MODE (Mod2):

Allows the complete management of the unit: programming (F.1), cancellations (F.2), time configuration (F.3) and relay configuration (F.4).

Function is changed using \uparrow \downarrow . To confirm each option, press the C key. Events monitoring (only visible using the Assistant).

F.1 PROGRAMMING

Standard programming (Mr_P) (default option, multi-channel mode)

The screen displays the first empty memory position in which we can program a code (M001). With the ↑ ↓ keys we can increase or decrease the memory position. If ↑ ↓ are kept pressed down for more than 3 seconds, the positions increase or decrease rapidly. If a memory position is taken, this will be indicated by a dot on the screen.

To return to the previous menu, move to the ----- position and press the C key.

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and emits two short beeps.

Special programming (Mr_1 ... Mr34)

Allows selection of the relays that will be activated with the channel programmed from the transmitter. Example: If you wish to program Channel 1 of the transmitter so that relays 1 and 3 activate, you need to select option Mr13.

The screen displays the first empty memory position in which we can program a code (M001).

Using ↑ ↓, we can increase or decrease the memory position. If ↑ ↓ are kept pressed down for more than 3 seconds, the positions increase or decrease rapidly. If a memory position is taken, this will be indicated by a dot on the screen.

To return to the previous menu, move to the ----- position and press the C key.

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and emits two short beeps.

F.2 CANCELLATIONS

Individual cancellation

To delete a code, move to the position where the code is located and press the C key. The dot indicating a taken position will disappear. The equipment will emit three short beeps.

To return to the previous menu, move to the ----- position and press the C key.

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and emits two short beeps.

Total reset

Move to any memory position and keep the C key pressed down for more than 5 seconds. The equipment will emit 10 warning beeps followed by others at a more rapid frequency, indicating that the operation has been performed.

F.3 TIME CONFIGURATION

Allows the unit's date and time to be configured, enabling the correct management of events.

Screen display	Configuration	Values (xx)
d_xx	day	01 - 31
M_xx	month	01 - 12
A_xx	year	00 - 99
h_xx	time	00 - 23
M_xx	minutes	01 - 60

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and

emits two short beeps.

F.4 RELAY CONFIGURATION

Allows configuration of the relay activation timing, and in relay 4, allows configuration of timing if it is to be used as an alarm.

Screen display	Bi-stable configuration (biES)	Impulse configuration (Im)	Alarm configuration (Al)
r1	Yes	01 – 30 seconds	No
r2	Yes	01 – 30 seconds	No
r3	Yes	01 – 30 seconds	No
r4	Yes	01 – 30 seconds	01 – 15 minutes

To return to the previous menu, move to the ----- position and press the C key.

If no action is performed, the equipment exits the program automatically after a period of 60 seconds and emits two short beeps.

MESSAGES

Screen display	Type of message
OcuP	Displayed when attempting to register a code in a position which is already taken Skips to the first free position emitting a beep.
rEP	Displayed when attempting to register a code which is already programmed in another position. Skips to the position where the programmed code is located, emitting a beep, and allows the transmitter to be reprogrammed.
no	Displayed when pressing a transmitter which is not programmed in the unit.
datE	Displayed when a proximity element is used outside its period of validity.

ERRORS

Screen display	Type of error
Err.M	Memory error: memory card not inserted or faulty.
Err.M	Memory error: memory card with incorrect format (from other equipment). Emits a beep.
Err.E	Events error: wrong events card.
Err.E	Events error: events card with incorrect format (from other equipment). Emits a beep.
Err	Wrong password

USE OF THE UNIT

These units are designed for the remote control of garage doors, to send the activation commands to control panels in which the card is inserted. Its use is not guaranteed for directly activating units other than those specified. The manufacturer reserves the right to modify equipment specifications without prior notice.

IMPORTANT ANNEX

Disconnect the power supply before handling the unit.

In compliance with the European Directive low-voltage electrical equipment, we hereby inform users of the following requirements:

- For units which are permanently connected, an easily accessible circuit-breaker device must be built into the wiring system.
- This unit must always be installed in a vertical position and firmly fixed to the structure of the building.
- This unit must only be handled by a specialised installer, by his maintenance staff or by a duly trained operator.
- The instruction manual for this unit must always remain in the possession of the user.
- Terminals of maximum section 3,8mm² must be used for the power supply connections.

EC DECLARATION OF CONFORMITY

JCM TECHNOLOGIES, S.A. declares herewith that the product ACCESS500 complies with the requirements of the 1999/5/ CEE R&TTE Directive, insofar as the product is used correctly.